

VRF INDOOR UNITS

Technical Catalog

*Technical Data
Intsallation*

SERIES

R32 High Static Slim Ducted Type



IMPORTANT NOTICE

- Cooper&Hunter pursues a policy of continuing improvement in design and performance of products. The right is therefore reserved to vary specifications without notice.
- Cooper&Hunter cannot anticipate every possible circumstance that might involve a potential hazard.
- This heat pump air conditioner is designed for standard air conditioning only. Do not use this heat pump air conditioner for other purposes such as drying clothes, refrigerating foods or for any other cooling or heating process.
- The installer and system specialist shall secure safety against leakage according to local regulations or standards. The following standards may be applicable if local regulations are not available: British Standard, BS4434 or Japan Standard, KHK0010.
- No part of this manual may be reproduced without written permission.
- Signal words (DANGER, WARNING and CAUTION) are used to identify levels of hazard seriousness. Definitions for identifying hazard levels are provided below their respective signal words.

⚠ DANGER

: Immediate hazards which WILL result in severe personal injury or death.

⚠ WARNING

: Hazards or unsafe practices which COULD result in severe personal injury or death.

⚠ CAUTION

: Hazards or unsafe practices which COULD result in minor personal injury or product or property damage.

NOTE



: Useful information for operation and/or maintenance.

: FLAMMABLE MATERIAL

Explanation of symbols displayed on the indoor unit or outdoor unit. (Only when using R32)

	WARNING	This symbol show that appliance uses a flammable refrigerant (A2L). If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.
	CAUTION	This symbol shows that the Operation Manual should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the Installation Manual.
	CAUTION	This symbol shows that there is information included in the Operation Manual and/or Installation Manual.

- It is assumed that this heat pump air conditioner will be operated and serviced by English speaking people. If this is not the case, safety, caution and operating signs in native language should be added.
- If you have any questions, please contact the distributor or dealer of Hisense.
- This manual gives a common description and information for this heat pump air conditioner which you operate as well as for other models.
- Refer to the manual of outdoor unit for temperature operation range.

This manual should be considered as a permanent part of the air conditioning equipment and should remain with the air conditioning equipment.

IMPORTANT NOTICE



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

CHECKING PRODUCT RECEIVED


- Upon receiving this product, inspect it for any shipping damage.
Claim for damage, either apparent or concealed, should be filed immediately with the shipping company.
- Check the model number, electrical characteristics (power supply, voltage and frequency) and accessories to determine if they are correct.

The standard usage of the unit shall be explained in these instructions.

Therefore, the use of the unit other than those given in these instructions is not recommended.

Please contact your local agent as the occasion arises.

Cooper&Hunter's liability shall not cover defects arising from the alteration performed by a customer without Cooper&Hunter's consent in a written form.

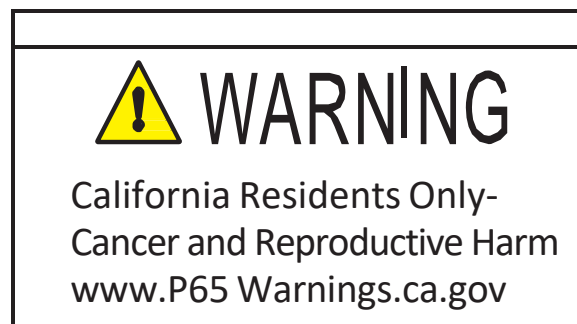

Safety Summary

DANGER

- Do not pour water into the indoor or outdoor unit. These products are equipped with electrical parts. Otherwise, it will cause a serious electric shock.
- Do not touch or adjust safety devices inside the indoor or outdoor units. Otherwise, it may cause a serious accident.
- Do not open the service cover or access the indoor or outdoor units without turning OFF the main power supply.

WARNING

- Refrigerant leakage can cause difficulty with breathing due to insufficient air.
If leakage occurs, turn OFF the main switch, put out fire at once and contact with your service contractor.
- Do not use any sprays such as insecticide, lacquer, hair spray or other flammable gases within approximately 3.3ft.(1m) from the system.
- If ground leakage breaker (GLB) or fuse is frequently activated, stop the system and contact your service contractor.
- Do not disconnect the pipe connection after checking the leak otherwise it may cause refrigerant leakage.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that the R32 refrigerant does not contain an odour.
- Do not disconnect the pipe connection after checking the leak otherwise it may cause refrigerant leakage.

CAUTION

- **Installation (Space)**

That the installation of pipe-work shall be kept to a minimum.

That pipe-work shall be protected from physical damage and shall not be installed in an unventilated space.

That compliance with national gas regulations shall be observed.

That mechanical connections shall be accessible for maintenance purposes.

In cases that require mechanical ventilation, ventilation openings shall be kept clear of obstruction.

When disposing of the product is used, be based on national regulations, properly processed.

An unventilated area where the appliance using flammable refrigerants is installed shall be so constructed that should any refrigerant leak, it will not stagnate so as to create a fire or explosion hazard

–The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation

–The appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater).

Other potential continuously operating sources known to cause ignition of the refrigerant used.

The appliance shall be stored so as to prevent mechanical damage from occurring.

- **Servicing**

- **Service personnel**

Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification

Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.

Servicing shall be performed only as recommended by the manufacturer.

Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the precautions in 2-2 to 2-10 shall be complied with prior to conducting work on the system.

Work procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.

General work area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres.

Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand.

Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

No ignition sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any source of ignition in such a manner that it may lead to the risk of fire or explosion.

All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space.

Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

Ventilated area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work.

A degree of ventilation shall continue during the period that the work is carried out.

The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification.

At all times the manufacturer's maintenance and service guidelines shall be followed.

If in doubt consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed.
- The ventilation machinery and outlets are operating adequately and are not obstructed.
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant.

Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.

Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.

If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.

If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used.

This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include.

- That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking.
- That there no live electrical components and wiring are exposed while charging, recovering or purging the system.
- That there is continuity of earth bonding.

Repairs to sealed components

During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.

If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected

This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc

Ensure that apparatus is mounted securely.

Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres

Replacement parts shall be in accordance with the manufacturer's specifications

Repair to intrinsically safe components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere.

The test apparatus shall be at the correct rating.

Replace components only with parts specified by the manufacturer.

Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects

The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

Detection of flammable refrigerant

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks.

A halide torch (or any other detector using a naked flame) shall not be used.

Leak detection methods

Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)

Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.

Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, isolated (by means of shut off valves) in a part of the system remote from the leak.

Oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

Repairs to sealed components

Removal and evacuation

When breaking into the refrigerant circuit to make repairs or for any other purpose conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration

The following procedure shall be adhered to:

- remove refrigerant
- purge the circuit with inert gas
- evacuate
- purge again with inert gas
- open the circuit by cutting or brazing

The refrigerant charge shall be recovered into the correct recovery cylinders.

The system shall be "flushed" with OFN to render the unit safe.

This process may need to be repeated several times.

Compressed air or oxygen shall not be used for this task.

Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.

This process shall be repeated until no refrigerant is within the system.

When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

This operation is absolutely vital if brazing operations on the pipe work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and there is ventilation available.

Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment.
- Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept upright.–
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system it shall be pressure tested with OFN.

The system shall be leak tested on completion of charging but prior to commissioning.

A follow up leak test shall be carried out prior to leaving the site.

Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details.

It is recommended good practice that all refrigerants are recovered safely.

Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant.

It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.

-
- d) Pump down refrigerant system, if possible.
 - e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
 - f) Make sure that cylinder is situated on the scales before recovery takes place.
 - g) Start the recovery machine and operate in accordance with manufacturer's instructions.
 - h) Do not overfill cylinders. (No more than 80 % volume liquid charge).
 - i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
 - j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off
 - k) Recovered refrigerant shall not be charged into an other refrigeration system unless it has been cleaned and checked.

Labeling

Equipment shall be labeled stating that it has been de-commissioned and emptied of refrigerant.

The label shall be dated and signed.

Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant

Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.

Ensure that the correct number of cylinders for holding the total system charge are available.

All cylinders to be used are designated for the recovered refrigerant and labeled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).

Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.

Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants.

In addition, a set of calibrated weighing scales shall be available and in good working order.

Hoses shall be complete with leak-free disconnect couplings and in good condition.

Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant

Waste Transfer Note arranged.

Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.

The evacuation process shall be carried out prior to returning the compressor to the suppliers.

Only electric heating to the compressor body shall be employed to accelerate this process.

When oil is drained from a system, it shall be carried out safely.

1. System Introduction

VRF Series

Cooper&Hunter proudly introduces the New Indoor Units, the highly-efficient and reliable air conditioning system. Recently, increased numbers of buildings are requiring "Intelligent" facilities - communication networks, office automation, including a comfortable environment. Particularly, comfortable space is required all the day through the year in office buildings.

This multi-split system air conditioner, can meet these requirements. The proven combination of the scroll compressor and the inverter provides the best air conditioning for small/medium office buildings.

Uses of the HFC Series New R32 Refrigerant

Cooper&Hunter has developed and introduced the new indoor units to meet the global needs to help protect the Earth's environment by using non-ozone depleting refrigerant, R32 as Cooper&Hunter's standard series.

Various Indoor Units and Combinations

The line-up of new series indoor units has been extended up to 52 indoor units in 6 types to meet various building requirements. (05 through 96 kBtu/h).

Series	Nominal Capacity (kBtu/h)																				
	05	07	09	12	15	17	18	19	22	24	27	28	30	36	38	42	48	54	60	76	96
Ceiling Ducted Type		○	○	○	○			○		○			○		○		○	○		○	○
Low-Height Ceiling Ducted Type	○	○	○	○	○			○		○											
4-Way Cassette Type			○	○	○			○		○			○		○		○	○			
Mini 4-Way Cassette Type	○	○	○	○	○	○		○													
Wall Mounted Type		○	○	○	○			○		○		○									
Multi-position Air Handler Unit			○	○			○			○			○	○		○	○	○	○		

○ : Available

Celling ducted type

2. Celling ducted type (sdhsp)

2.1 General Data

Indoor unit type		Celcing Ducted Type (DC High Static Pressure)		
Model Power supply	1Φ, 208/230V/60Hz	CHV-RS07SDHSP	CHV-RS09SDHSP	CHV-RS12SDHSP
Nominal Cooling Capacity	kW	2.2	2.8	3.6
	kcal/h	1900	2400	3100
	Btu/h	7500	9600	12300
Cooling Power Consumption	kW	0.040	0.040	0.055
Nominal Heating Capacity	kW	2.5	3.2	4.0
	kcal/h	2200	2800	3400
	Btu/h	8500	10900	13700
Heating Power Consumption	kW	0.040	0.040	0.055
Cooling Operating Current	A	0.36	0.36	0.59
Heating Operating Current	A	0.36	0.36	0.59
Sound Pressure Level	dB(A)	30/27/23/21/20/19	30/27/23/21/20/19	35/33/32/28/26/24
Outer Dimensions Height	in.	10-5/8	10-5/8	10-5/8
	mm	270	270	270
Width	in.	25-19/32+2-61/64	25-19/32+2-61/64	25-19/32+2-61/64
	mm	650+75	650+75	650+75
	in.	28-11/32	28-11/32	28-11/32
Depth	mm	720	720	720
Net Weight	lbs.	53	53	53
	kg	24	24	24
Refrigerant	-	R32(Nitrogen-Charged for Corrosion-Resistance)		
Air Flow Rate	cfm	318/283/240/ 222/205/187	318/283/240/ 222/205/187	424/388/353/ 318/283/254
	m³/h	540/480/408/ 378/348/318	540/480/408/ 378/348/318	720/660/600/ 540/480/432
External Pressure	in.w.g	0.12 (0.12/0.16/0.20/0.24/0.28/0.32/0.36 /0.40/0.44/0.48/0.52/0.56/0.60)		
	Pa	30 (30/40/50/60/70/80/90 /100/110/120/130/140/150)		
Piping Connection	-	Flare-nut Connection(with Flare Nuts)		
Refrigerent Piping Liquid Line	in.	1/4	1/4	1/4
	mm	Ø6.35	Ø6.35	Ø6.35
Gas Line	in.	1/2	1/2	1/2
	mm	Ø12.7	Ø12.7	Ø12.7
Condensate Drain	-	VP25(Outer Diameter Ø32mm)		
Approximate Packing Measurement	ft³	10.59	10.59	10.59
	m³	0.30	0.30	0.30

NOTES:

- The nominal cooling capacity is the combined capacity of the C&H standard split system.

Cooling Operation Conditions

Indoor Air Inlet Temperature: 27°C DB (80°F DB)

19.0°C WB (66°F WB)

Outdoor Air Inlet Temperature: 35°C DB (95°F DB)

Heating Operation Conditions

Indoor Air Inlet Temperature: 20°C DB (68°F DB)

Outdoor Air Inlet Temperature: 7°C DB (44°F DB)

6°C WB (42°F WB)

Piping Length: 24.6ft. (7.5m) Piping Lift:0 Meter

- The sound pressure level is based on following conditions.

4.6ft.(1.4m) below the unit.

With discharge duct 6.6ft.(2.0m) and return duct 3.3ft. (1.0m).

The above data were measured in an anechoic chamber so that reflected sound should be taken into consideration in the field.

- The above air flow rate and noise level are tested with AC 230V power supply.

Ceiling ducted type

Indoor unit type		Ceiling Ducted Type (DC High Static Pressure)		
Model Power supply	1Φ, 208/230V/60Hz	CHV-RS15SDHSP	CHV-RS19SDHSP	CHV-RS24SDHSP
Nominal Cooling Capacity	kW	4.5	5.6	7.1
	kcal/h	3900	4800	6100
	Btu/h	15400	19100	24200
Cooling Power Consumption	kW	0.055	0.055	0.082
Nominal Heating Capacity	kW	5.0	6.3	8.0
	kcal/h	4600	5400	6900
	Btu/h	17100	21600	27400
Heating Power Consumption	kW	0.055	0.055	0.082
Cooling Operating Current	A	0.59	0.59	0.75
Heating Operating Current	A	0.59	0.59	0.75
Sound Pressure Level	dB(A)	35/33/32/28/26/24	33/30/27/25/23/22	36/34/31/28/24/22
Outer Dimensions Height	in.	10-5/8	10-5/8	10-5/8
	mm	270	270	270
Width	in.	25-19/32+2-61/64	35-7/16+2-61/64	35-7/16+2-61/64
	mm	650+75	900+75	900+75
	in.	28-11/32	28-11/32	28-11/32
Depth	mm	720	720	720
Net Weight	lbs.	53	70	70
	kg	24	32	32
Refrigerant	-	R32(Nitrogen-Charged for Corrosion-Resistance)		
Air Flow Rate	cfm	424/388/353/ 318/283/254	512/459/406/ 371/335/307	671/600/530/ 459/388/335
	m³/h	720/660/600/ 540/480/432	870/780/690/ 630/570/522	1140/1020/900/ 780/660/570
External Pressure	in.w.g	0.12 (0.12/0.16/0.20/0.24/0.28/0.32/0.36 /0.40/0.44/0.48/0.52/0.56/0.60)		
	Pa	30 (30/40/50/60/70/80/90 /100/110/120/130/140/150)		
Piping Connection	-	Flare-nut Connection(with Flare Nuts)		
Refrigerent Piping Liquid Line	in.	1/4	1/4	3/8
	mm	Ø6.35	Ø6.35	Ø9.53
Gas Line	in.	1/2	5/8	5/8
	mm	Ø12.7	Ø15.88	Ø15.88
Condensate Drain	-	VP25(Outer Diameter Ø32mm)		
Approximate Packing Measurement	ft³	10.59	13.42	13.42
	m³	0.30	0.38	0.38

NOTES:

- The nominal cooling capacity is the combined capacity of the COOPER&HUNTER standard split system.
Cooling Operation Conditions
Indoor Air Inlet Temperature: 27°C DB (80°F DB)
19.0°C WB (66°F WB)
Outdoor Air Inlet Temperature: 35°C DB (95°F DB)
Heating Operation Conditions
Indoor Air Inlet Temperature: 20°C DB (68°F DB)
Outdoor Air Inlet Temperature: 7°C DB (44°F DB)
6°C WB (42°F WB)
Piping Length: 24.6ft. (7.5m) Piping Lift:0 Meter
- The sound pressure level is based on following conditions.
4.6ft.(1.4m) below the unit.
With discharge duct 6.6ft.(2.0m) and return duct 3.3ft. (1.0m).
The above data were measured in an anechoic chamber so that reflected sound should be taken into consideration in the field.
- The above air flow rate and noise level are tested with AC 230V power supply.

Celling ducted type

Indoor unit type		Celing Ducted Type (DC High Static Pressure)			
Model Power supply	1Φ, 208/230V/60Hz	CHV-RS30SDHSP	CHV-RS38SDHSP	CHV-RS48SDHSP	CHV-RS54SDHSP
Nominal Cooling Capacity	kW	9.0	11.2	14.0	16.0
	kcal/h	7700	9600	12000	13800
	Btu/h	30800	38000	48000	54500
Cooling Power Consumption	kW	0.100	0.132	0.180	0.223
Nominal Heating Capacity	kW	10.0	12.5	16.0	18.0
	kcal/h	8600	10700	13800	15500
	Btu/h	34200	42500	54500	61500
Heating Power Consumption	kW	0.100	0.132	0.180	0.223
Cooling Operating Current	A	0.71	0.93	1.21	2.04
Heating Operating Current	A	0.71	0.93	1.21	2.04
Sound Pressure Level	dB(A)	34/32/30/28/25/22	37/35/31/29/26/23	38/36/34/31/29/26	41/38/35/33/30/27
Outer Dimensions Height	in.	11-13/16	11-13/16	11-13/16	11-13/16
	mm	300	300	300	300
Width	in.	43-5/16+2-61/64	43-5/16+2-61/64	55-1/8+2-61/64	55-1/8+2-61/64
	mm	1100+75	1100+75	1400+75	1400+75
	in.	31-1/2	31-1/2	31-1/2	31-1/2
Depth	mm	800	800	800	800
Net Weight	lbs.	92	92	125	125
	kg	42	42	52	52
Refrigerant	-	R32(Nitrogen-Charged for Corrosion-Resistance)			
Air Flow Rate	cfm	883/812/742/ 671/600/530	989/883/812/ 742/671/600	1254/1148/1042/ 936/830/724	1377/1254/1095/ 936/830/770
	m³/h	1500/1380/1260/ 1140/1020/900	1680/1500/1380/ 1260/1140/1020	2130/1950/1770/ 1590/1410/1230	2340/2130/1860/ 1590/1410/1308
External Pressure	in.w.g	0.20 (0.20/0.24/0.28/0.32/0.36/0.40/0.44/0.48 /0.52/0.56/0.60/0.64/0.68/0.72/0.76/0.80)			
	Pa	50 (50/60/70/80/90/100/110/120/130/140/150/160/170/180/190/200)			
Piping Connection	-	Flare-nut Connection(with Flare Nuts)			
Refrigerent Piping Liquid Line	in.	3/8	3/8	3/8	3/8
	mm	Ø9.53	Ø9.53	Ø9.53	Ø9.53
Gas Line	in.	5/8	5/8	5/8	5/8
	mm	Ø15.88	Ø15.88	Ø15.88	Ø15.88
Condensate Drain	-	VP25(Outer Diameter Ø32mm)			
Approximate Packing Measurement	ft³	18.72	18.72	22.95	22.95
	m³	0.53	0.53	0.65	0.65

NOTES:

- The nominal cooling capacity is the combined capacity of the Cooper&Hunter standard split system.
Cooling Operation Conditions
Indoor Air Inlet Temperature: 27°C DB (80°F DB)
19.0°C WB (66°F WB)
Outdoor Air Inlet Temperature: 35°C DB (95°F DB)
Heating Operation Conditions
Indoor Air Inlet Temperature: 20°C DB (68°F DB)
Outdoor Air Inlet Temperature: 7°C DB (44°F DB)
6°C WB (42°F WB)
Piping Length: 24.6ft. (7.5m) Piping Lift:0 Meter
- The sound pressure level is based on following conditions.
4.6ft.(1.4m) below the unit.
With discharge duct 6.6ft.(2.0m) and return duct 3.3ft. (1.0m).
The above data were measured in an anechoic chamber so that reflected sound should be taken into consideration in the field.
- The above air flow rate and noise level are tested with AC 230V power supply.

Ceiling ducted type


Indoor Unit Type		Ceiling Ducted Type (DC High Static Pressure)	
Model	Power Supply	CHV-RS76SDHSP	CHV-RS96SDHSP
Nominal Cooling Capacity	kW	22.4	28.0
	kcal/h	19,300	24,100
	Btu/h	76,500	95,600
Cooling Power Consumption	kW	0.61	0.83
Nominal Heating Capacity	kW	25.0	31.5
	kcal/h	21,500	27,100
	Btu/h	85,300	107,500
Heating Power Consumption	kW	0.61	0.83
Cooling Operating Current	A	4.75	7.35
Heating Operating Current	A	4.75	7.35
Sound Pressure Level	dB(A)	49/48/47/46/45/44	53/52/50/49/47/45
Outer Dimensions Height	in.	(18-1/2)	(18-1/2)
	mm	470	470
Width	in.	(49-1/4)	(49-1/4)
	mm	1,250	1,250
Depth	in.	(44-1/12)	(44-1/12)
	mm	1,120	1,120
Net Weight	lbs.	223	223
	kg	101	101
Refrigerant	-	R32(Nitrogen-Charged for Corrosion-Resistance)	
Indoor Fan Air Flow Rate (Hi/Me/Lo)	cfm	2012/1906/1835/1800/1730/1677	2541/2400/2294/2153/2030/1765
	m ³ /h	3420/3240/3120/3060/2940/2850	4320/4080/3900/3660/3450/3000
External Pressure(208V)*1	in.w.g	0.6	0.6
	Pa	150	150
External Pressure(230V)	in.w.g	0.6	0.6
	Pa	150	150
Refrigerant Piping Liquid Line	in.	3/8	3/8
	mm	Φ9.53	Φ9.53
Gas Line	in.	7/8	7/8
	mm	Φ22.2	Φ22.2
Condensate Drain	-	VP25	VP25
Approximate Packing Measurement	ft ³	38.14	38.14
	m ³	1.08	1.08

NOTES:

- The nominal cooling capacity is the combined capacity of the C&H standard split system.
Cooling Operation Conditions
Indoor Air Inlet Temperature: 27°C DB (80°F DB)

Outdoor Air Inlet Temperature: 19.0°C WB (66°F WB)
Heating Operation Conditions
Indoor Air Inlet Temperature: 20°C DB (68°F DB)
Outdoor Air Inlet Temperature: 7°C DB (44°F DB)
6°C WB (42°F WB)
Piping Length: 24.6ft. (7.5m) Piping Lift: 0 Meter
- The sound pressure level is based on following conditions.
4.6ft. (1.4m) below the unit.
With discharge duct 6.6ft. (2.0m) and return duct 3.3ft. (1.0m).
The above data were measured in an anechoic chamber so that reflected sound should be taken into consideration in the field.
- The above air flow rate and noise level are tested with AC 230V power supply and without a filter.

2.2 Dimensional Data

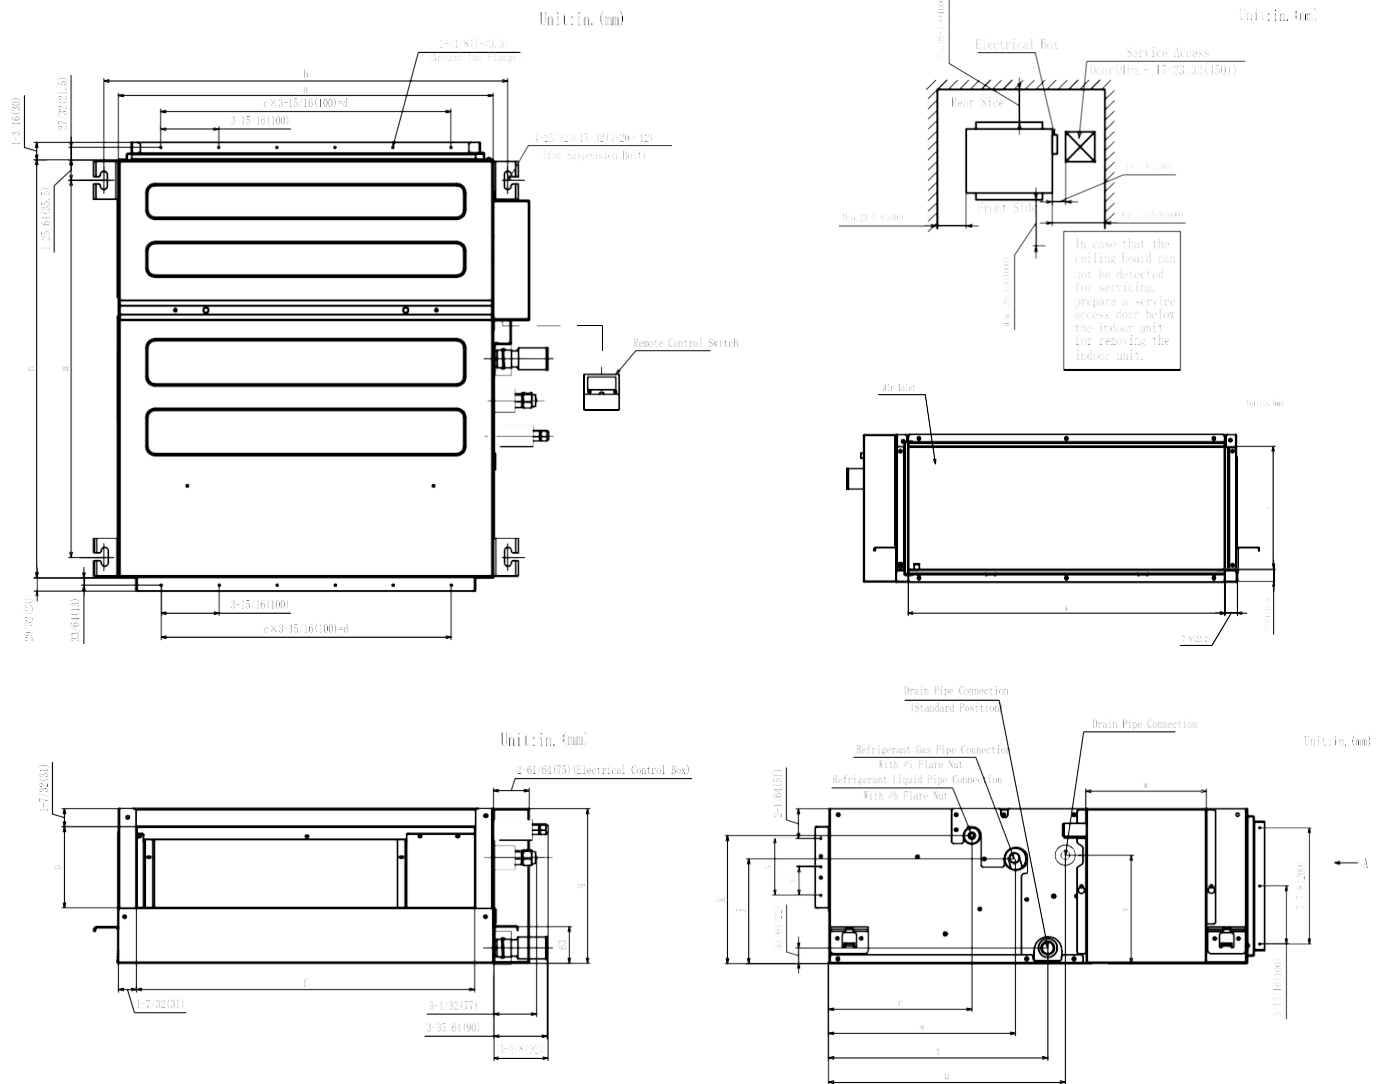


Dimension Model	a	b	c	d	f	g	h	i	j	k	l	m
CHV-RS07~15	25-19/32 (650)	27-9/16 (700)	13/64 (5)	19-11/16 (500)	22-63/64 (584)	23-11/16 (601.6)	1/4 (6.4)	1/2 (12.7)	7-11/64 (182)	8-47/64 (222)	45/64 (18)	25-19/32 (650)
CHV-RS19	35-7/16 (900)	37-1/4 (946)	5/16 (8)	31-1/2 (800)	32-53/64 (834)	33-17/32 (851.6)	1/4 (6.4)	5/8 (15.9)	7-11/64 (182)	8-47/64 (222)	15/16 (24)	25-19/32 (650)
CHV-RS24	35-7/16 (900)	37-1/4 (946)	5/16 (8)	31-1/2 (800)	32-53/64 (834)	33-17/32 (851.6)	3/8 (9.5)	5/8 (15.9)	7-11/64 (182)	8-47/64 (222)	15/16 (24)	25-19/32 (650)
CHV-RS30	43-5/16 (1100)	45-9/32 (1150)	25/64 (10)	39-3/8 (1000)	40-55/64 (1038)	41-9/16 (1055.6)	3/8 (9.5)	5/8 (15.9)	5-29/32 (150)	7-31/64 (190)	1-7/64 (28)	28-5/8 (727)
CHV-RS38	43-5/16 (1100)	45-9/32 (1150)	25/64 (10)	39-3/8 (1000)	40-55/64 (1038)	41-9/16 (1055.6)	3/8 (9.5)	3/4 (19.1)	5-29/32 (150)	7-31/64 (190)	1-7/64 (28)	28-5/8 (727)
CHV-RS48/54	55-1/8 (1400)	57-3/32 (1450)	33/64 (13)	51-3/16 (1300)	52-43/64 (1338)	53-19/64 (1353.6)	3/8 (9.5)	3/4 (19.1)	5-29/32 (150)	7-31/64 (190)	1-11/32 (34)	28-5/8 (727)

Dimension Model	n	p	q	r	s	t	u	v	w	x	y	z
CHV-RS07~5	28-11/32 (720)	5-33/64 (140)	10-5/8 (270)	9-11/16 (246)	12-41/64 (321)	14-27/32 (377)	15-53/64 (402)	7-13/32 (188)	8-9/64 (206.8)	9-29/64 (240.2)	3-27/32 (97.6)	1-59/64 (48.8)
CHV-RS19	28-11/32 (720)	5-33/64 (140)	10-5/8 (270)	9-11/16 (246)	12-41/64 (321)	14-27/32 (377)	15-53/64 (402)	7-13/32 (188)	8-9/64 (206.8)	9-29/64 (240.2)	3-27/32 (97.6)	1-59/64 (48.8)
CHV-RS24	28-11/32 (720)	5-33/64 (140)	10-5/8 (270)	9-11/16 (246)	12-41/64 (321)	14-27/32 (377)	15-53/64 (402)	7-13/32 (188)	8-9/64 (206.8)	9-29/64 (240.2)	3-27/32 (97.6)	1-59/64 (48.8)
CHV-RS30	31-1/2 (800)	7-3/4 (197)	11-13/16 (300)	10-5/8 (270)	13-37/64 (345)	15-25/32 (401)	16-31/32 (431)	7-9/32 (185)	9-3/32 (231)	11-9/32 (286.6)	6-7/64 (155)	3-3/64 (77.5)
CHV-RS38	31-1/2 (800)	7-3/4 (197)	11-13/16 (300)	10-5/8 (270)	13-37/64 (345)	15-25/32 (401)	16-31/32 (431)	7-9/32 (185)	9-3/32 (231)	11-9/32 (286.6)	6-7/64 (155)	3-3/64 (77.5)
CHV-RS48/5	31-1/2 (800)	7-3/4 (197)	11-13/16 (300)	10-5/8 (270)	13-37/64 (345)	15-25/32 (401)	16-31/32 (431)	7-9/32 (185)	9-3/32 (231)	11-9/32 (286.6)	6-7/64 (155)	3-3/64 (77.5)

Celling ducted type

Models: CHV-RS76~96SDHSP

unit: in. (mm)

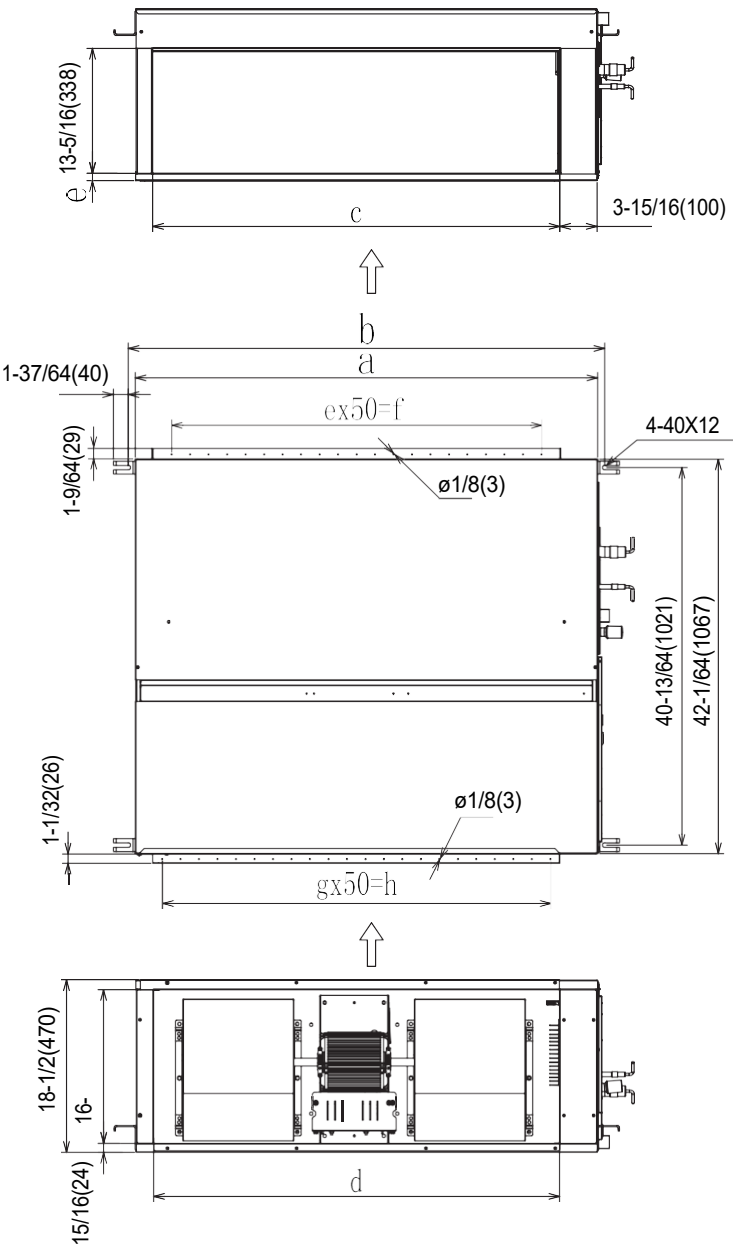


unit: in. (mm)

Model (10 ³ Btu/h)	a	b	c	d	e	f	g	h
76-96	49-7/32 (1250)	50-45/64 (1288)	43-35/64 (1106)	43-5/16 (1100)	25/32 (20)	39-3/8 (1000)	53/64 (21)	41-11/32 (1050)


Ceiling ducted type

2.3 Selection Data

- Operation Space

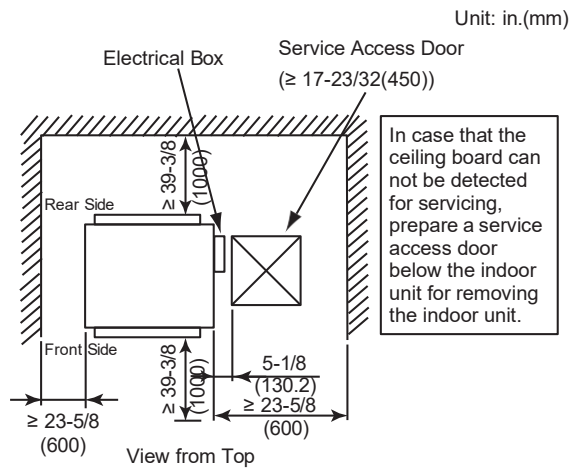

Model: CHV-RS76~96SDHSP

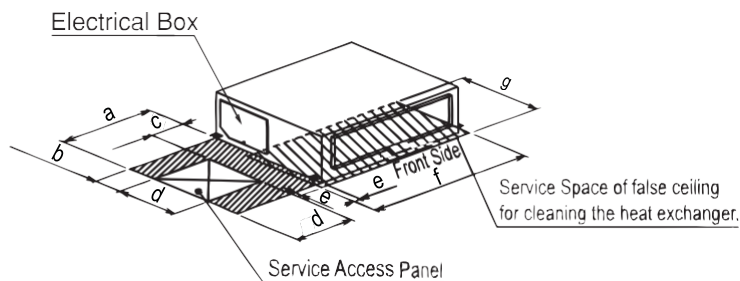

unit: in.(mm)

a	b	c	d	e	f	g
31-1/2 (800)	7-7/8 to 11-13/16 (200 to 300)	5-29/32 to 7-7/8 (150 to 200)	23-5/8 (600)	1-31/32 (50)	53-5/32 (1350)	28-47/64 (730)

- Sensible Heat Factor (SHF)

The sensible heat factor of indoor units at each fan speed (Hi, Me, Lo) is given in the table below.


Indoor Unit Model	SHF					
	Shi	Hi	Me	Lo	SLo	Breeze
CHV-RS07SDHSP	0.75	0.73	0.71	0.70	0.69	0.68
CHV-RS09SDHSP	0.75	0.73	0.71	0.70	0.69	0.68
CHV-RS12SDHSP	0.75	0.73	0.71	0.70	0.69	0.68
CHV-RS15SDHSP	0.75	0.73	0.71	0.70	0.69	0.68
CHV-RS19SDHSP	0.74	0.72	0.70	0.69	0.68	0.67
CHV-RS24SDHSP	0.74	0.72	0.70	0.69	0.68	0.67
CHV-RS30SDHSP	0.73	0.71	0.69	0.68	0.67	0.65
CHV-RS38SDHSP	0.73	0.71	0.69	0.68	0.67	0.65
CHV-RS48SDHSP	0.73	0.71	0.69	0.68	0.67	0.65
CHV-RS54SDHSP	0.73	0.71	0.69	0.68	0.67	0.65
CHV-RS76SDHSP		0.72				
CHV-RS96SDHSP		0.74				

Celling ducted type


- Fan Performance

Ceiling Ducted Type


CHV-RS07/09SDHSP (30Pa)

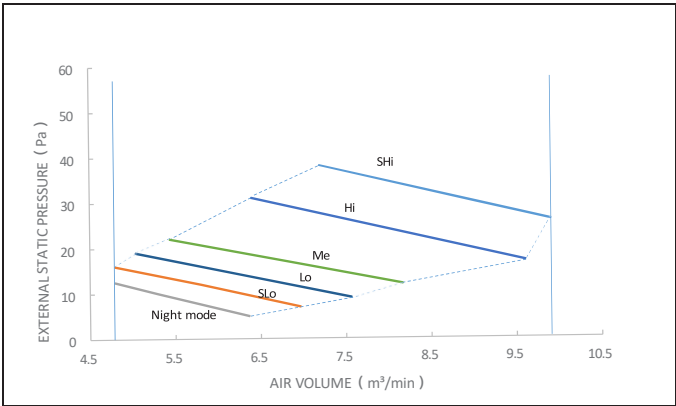


CHV-RS07/09SDHSP (70Pa)

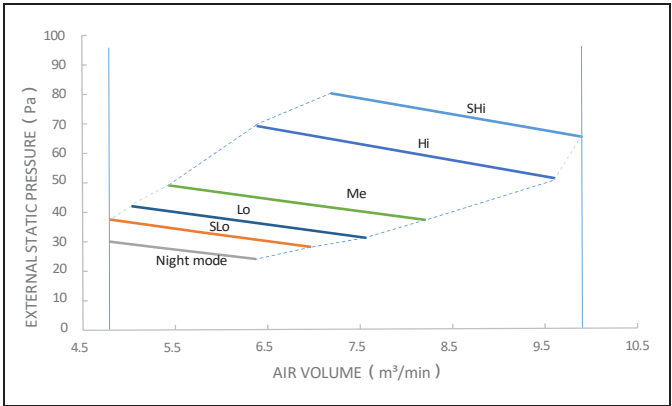


CHV-RS07/09SDHSP (110Pa)

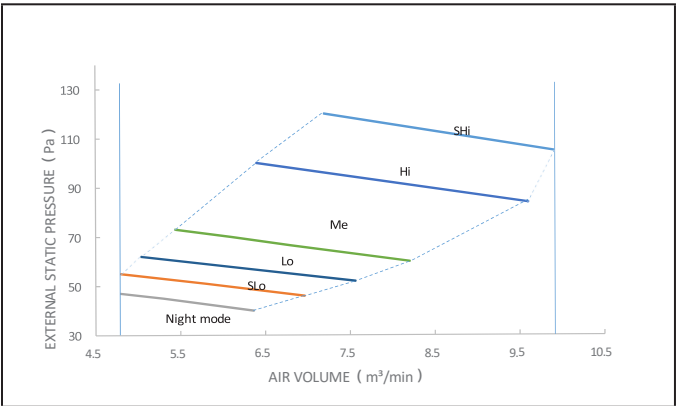


CHV-RS07/09SDHSP (150Pa)

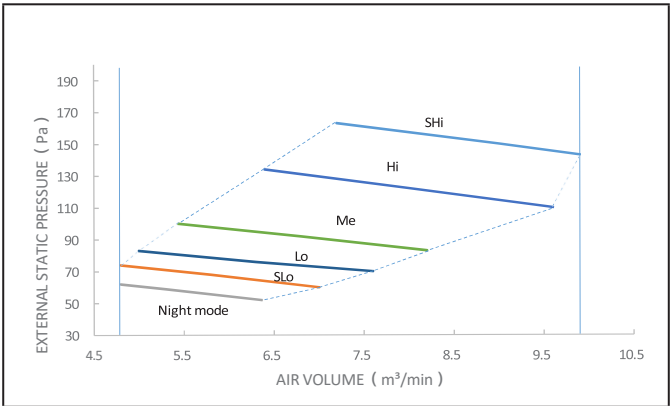


CHV-RS12/15SDHSP (30Pa)

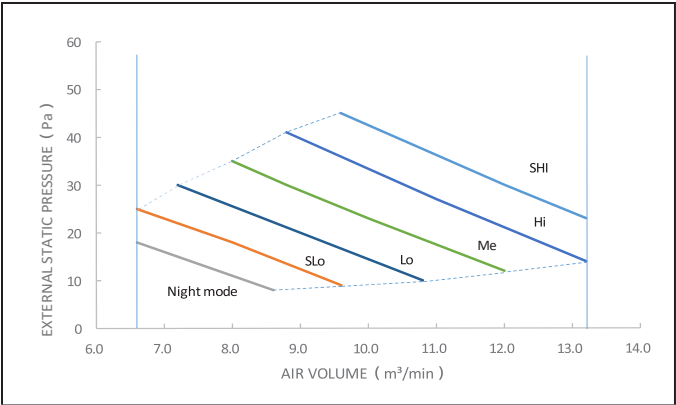


CHV-RS12/15SDHSP (70Pa)

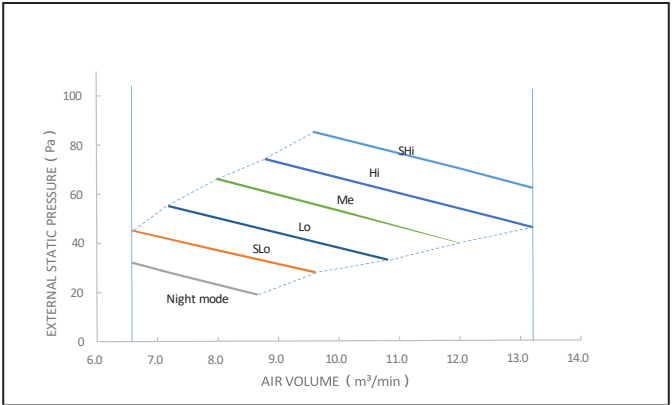

CHV-RS12/15SDHSP (110Pa)

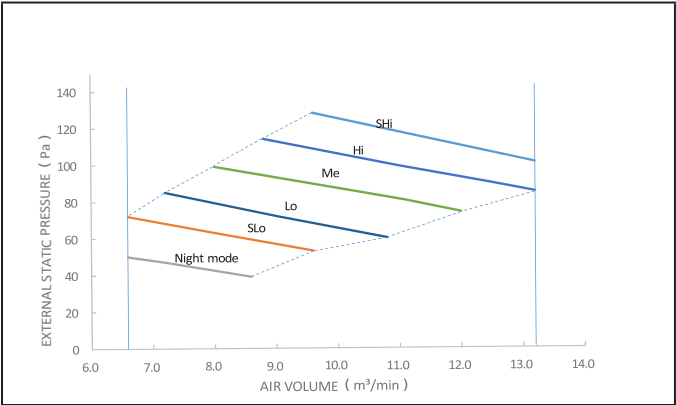


CHV-RS12/15SDHSP (150Pa)

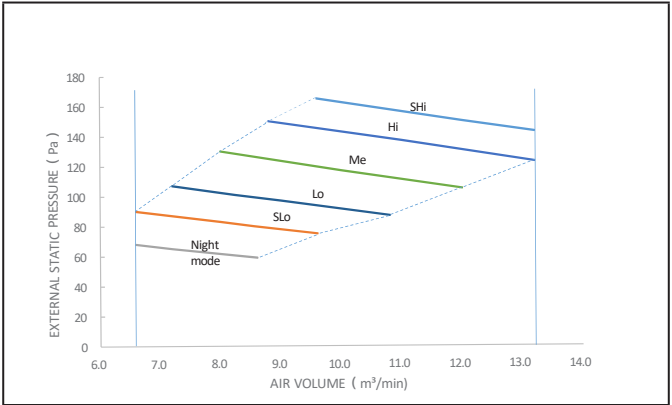


Celling ducted type


CHV-RS19SDHSP (30Pa)

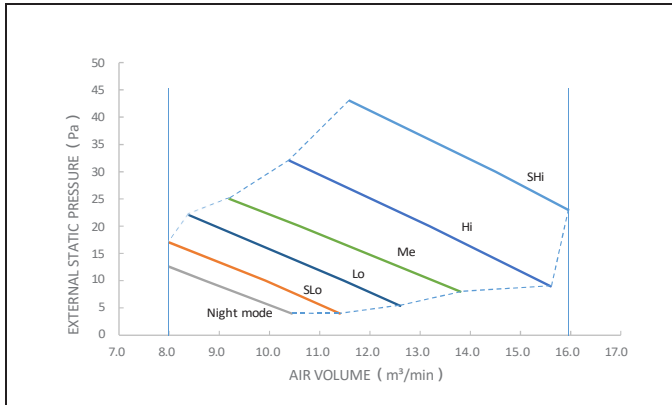


CHV-RS19SDHSP)

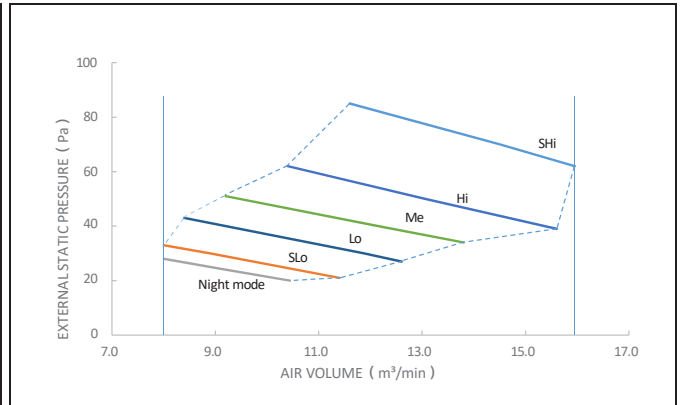


CHV-RS19SDHSP (110Pa)

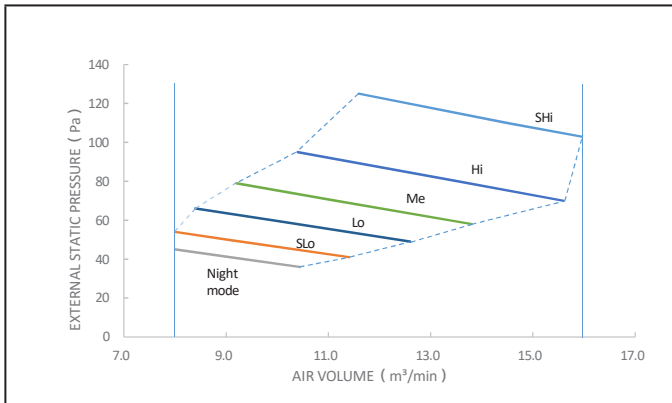


CHV-RS19SDHSP (150Pa)

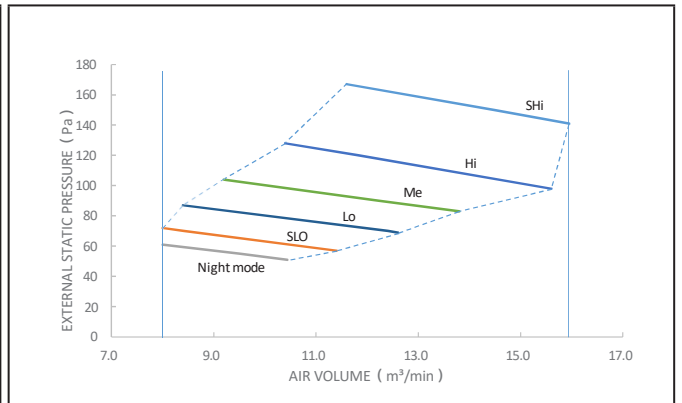


CHV-RS24SDHSP (30Pa)

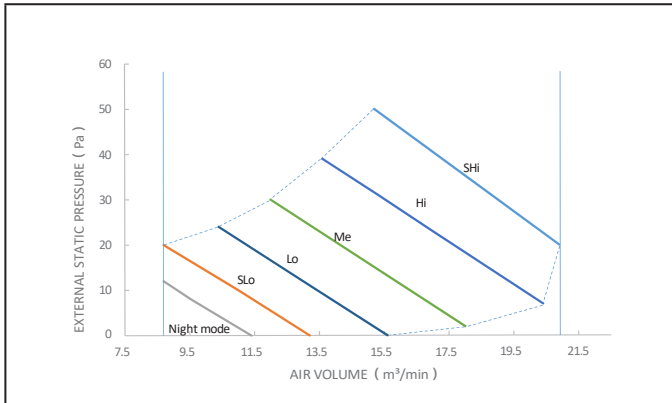


CHV-RS24SDHSP (70Pa)

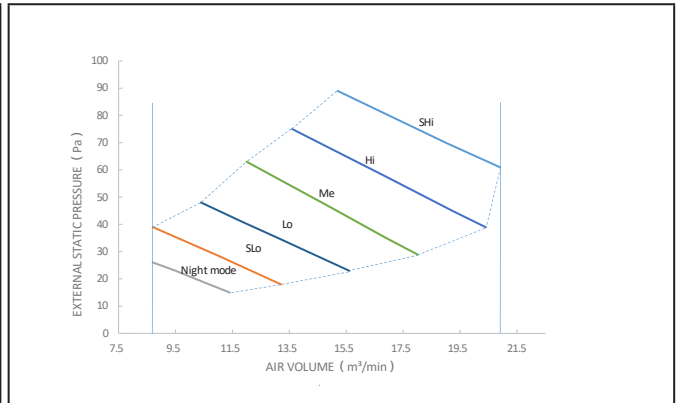

CHV-RS24SDHSP (110Pa)

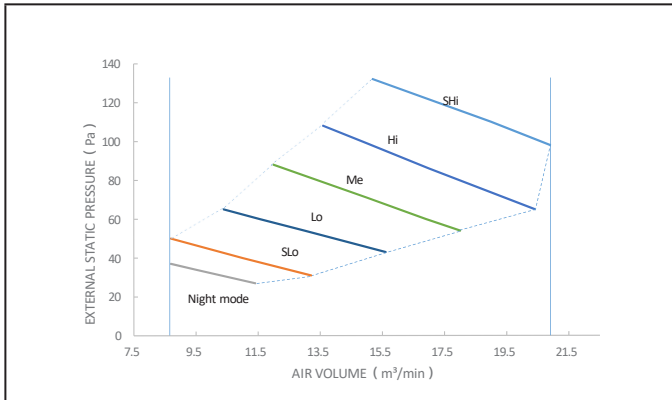


CHV-RS24SDHSP (150Pa)

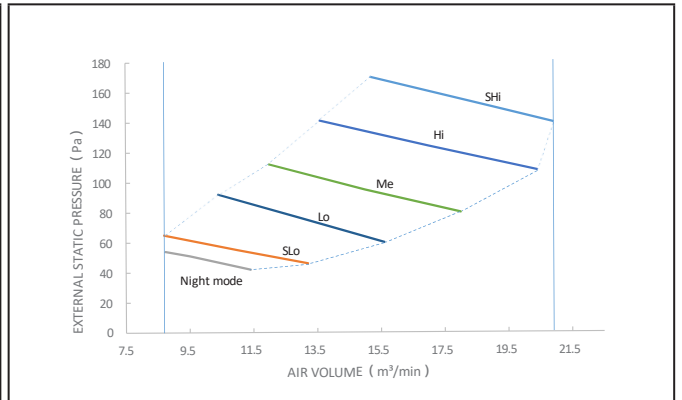


Celling ducted type


CHV-RS30SDHSP (50Pa)

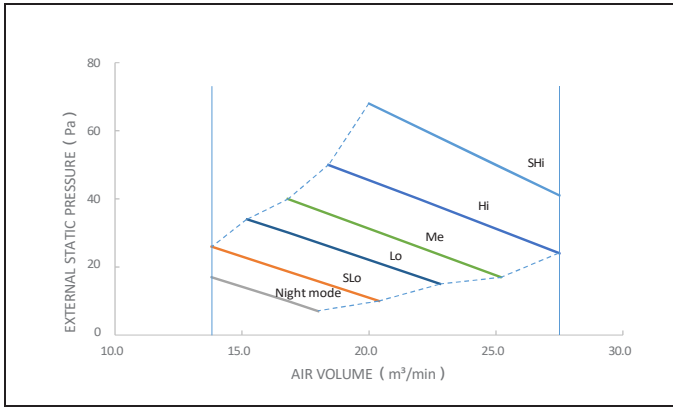


CHV-RS30SDHSP (100Pa)

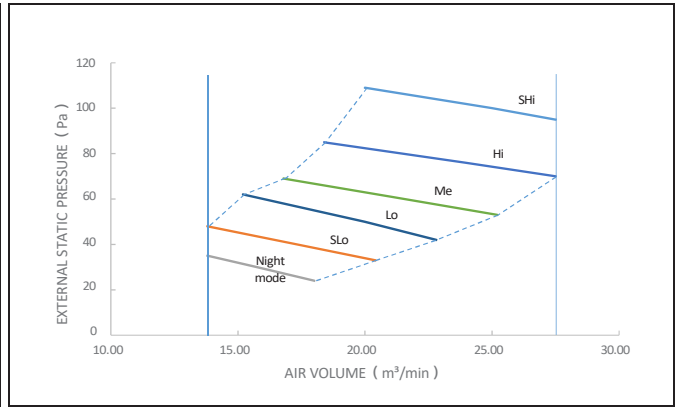


CHV-RS30SDHSP (150Pa)

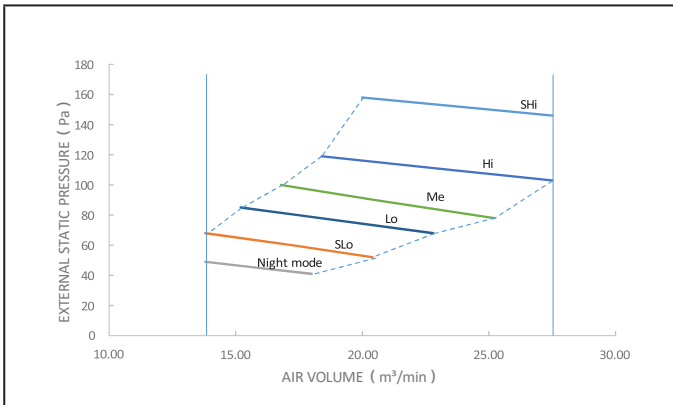


CHV-RS30SDHSP (200Pa)

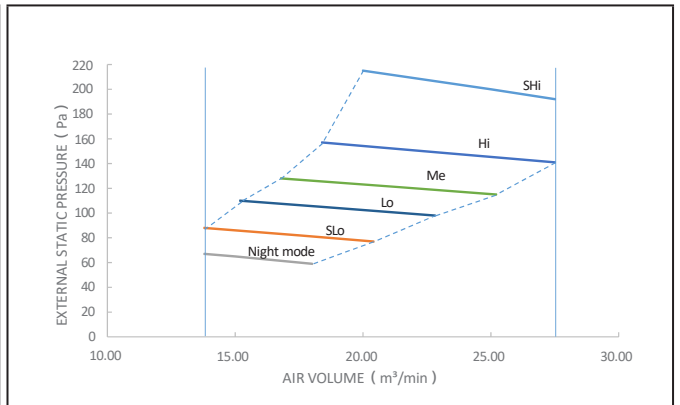


CHV-RS38SDHSP (50Pa)

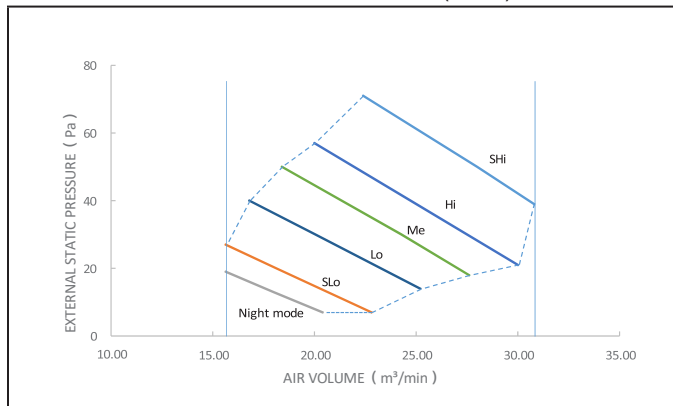


CHV-RS38SDHSP(100Pa)

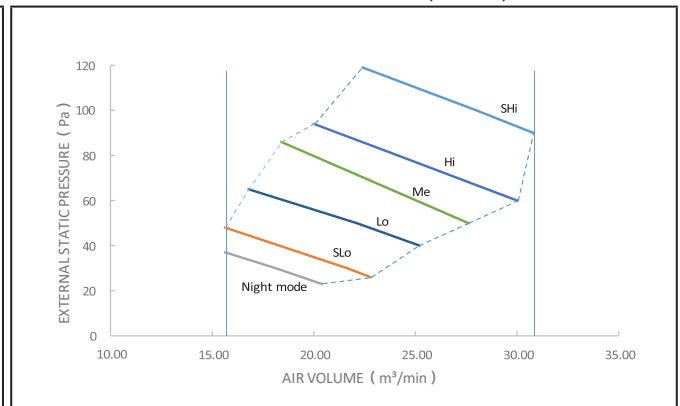

CHV-RS38SDHSP (150Pa)

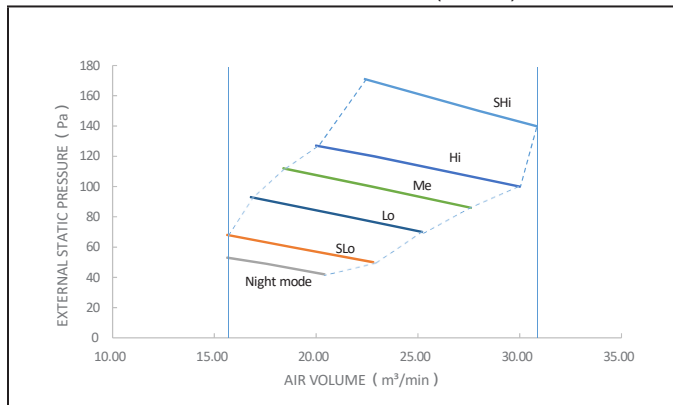


CHV-RS38SDHSP (200Pa)

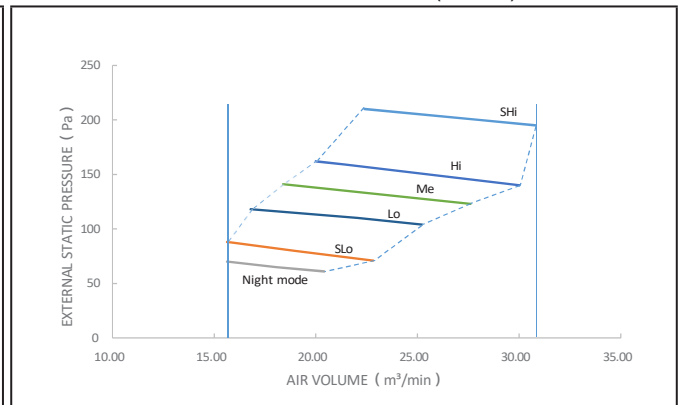


Celling ducted type


CHV-RS48SDHSP (50Pa)

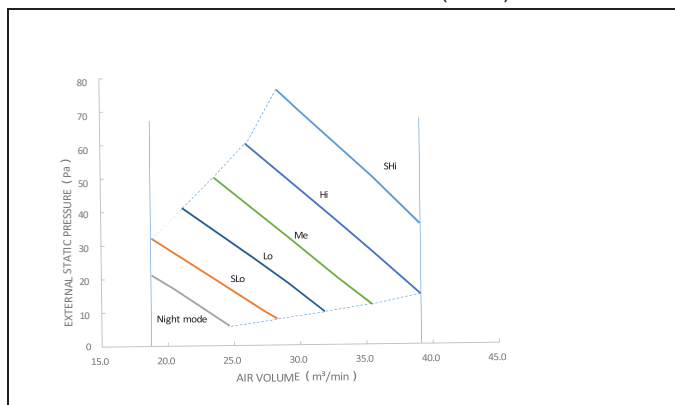


CHV-RS48SDHSP (100Pa)

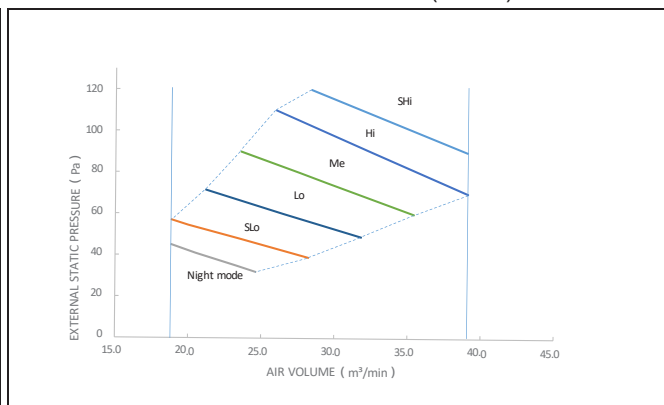


CHV-RS48SDHSP (150Pa)

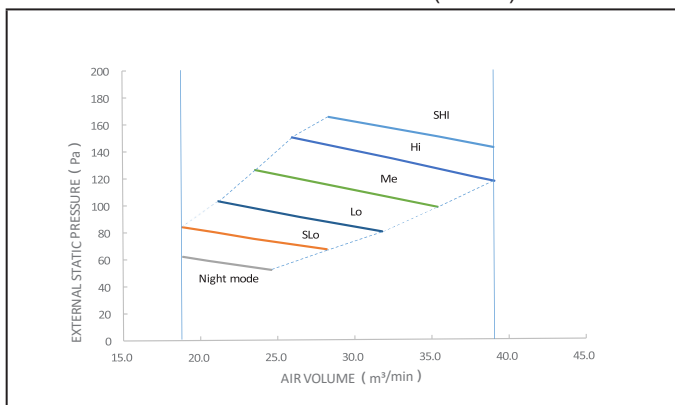


CHV-RS48SDHSP (200Pa)

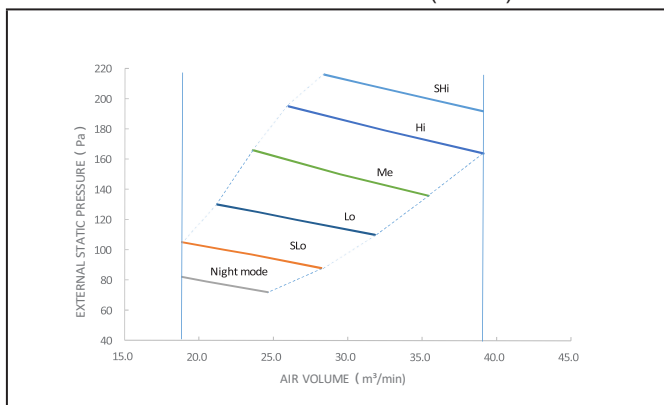


CHV-RS54SDHSP (50Pa)

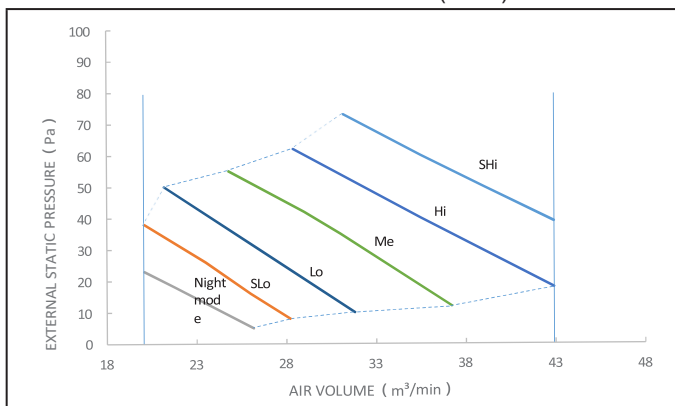


CHV-RS54SDHSP (100Pa)

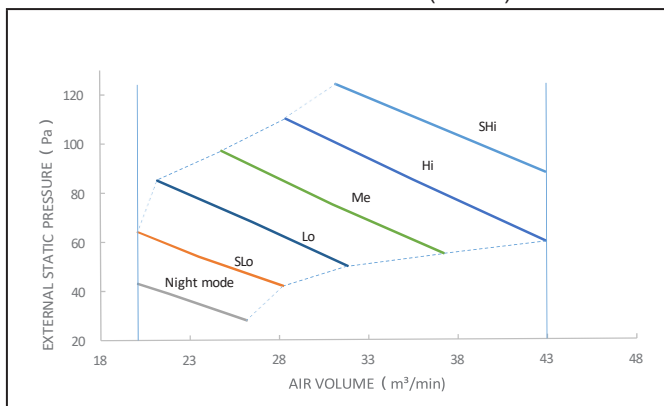

CHV-RS54SDHSP (150Pa)

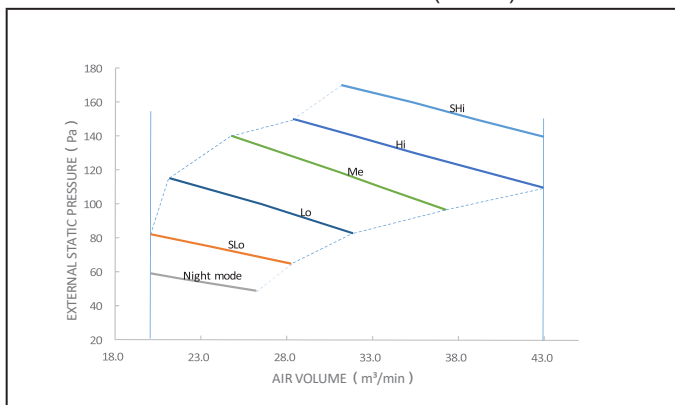


CHV-RS54SDHSP (200Pa)

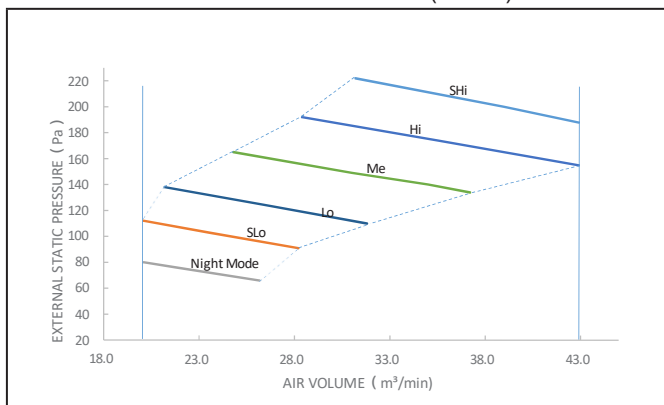


Celling ducted type


CHV-RS76SDHSP (50 Pa)

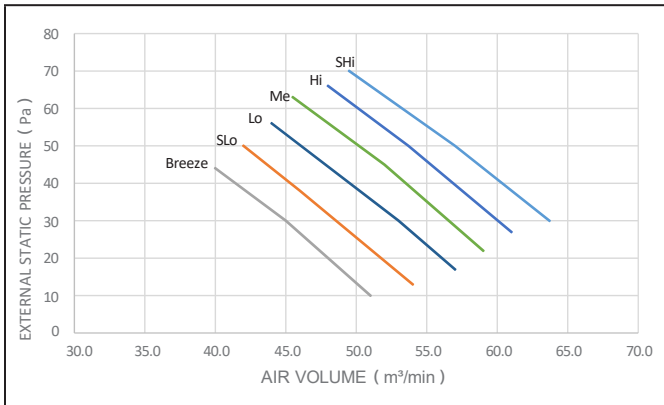


CHV-RS76SDHSP (100Pa)

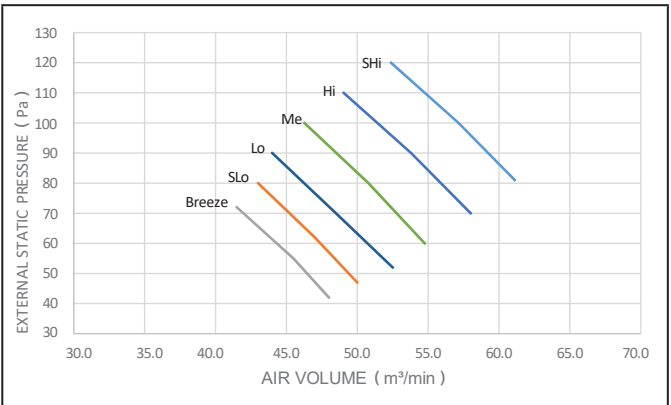


CHV-RS76SDHSP (150Pa)

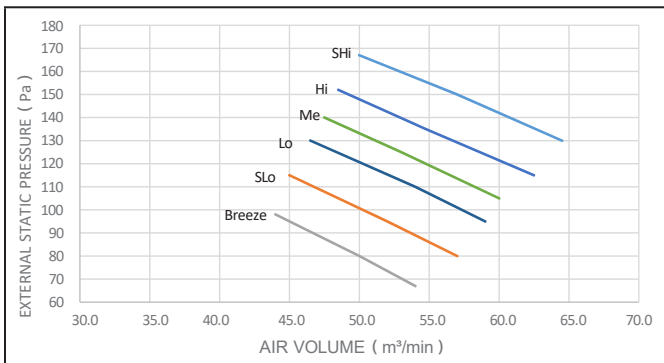


CHV-RS76SDHSP (200Pa)

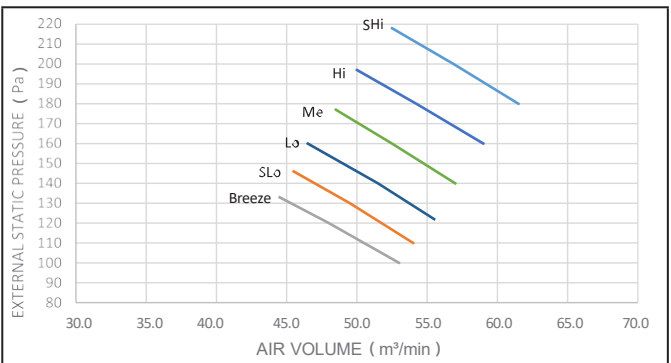

CHV-RS76SDHSP (250Pa)

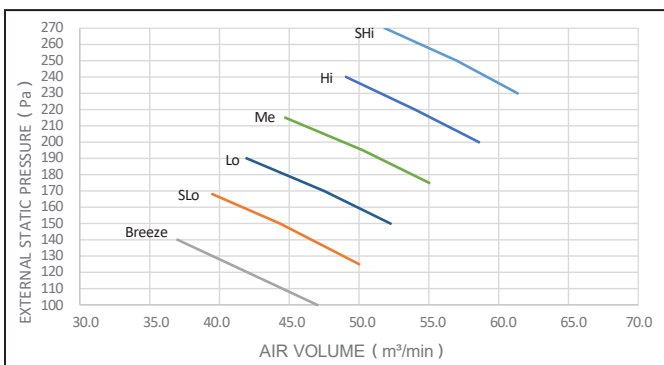


CHV-RS96SDHSP (50Pa)

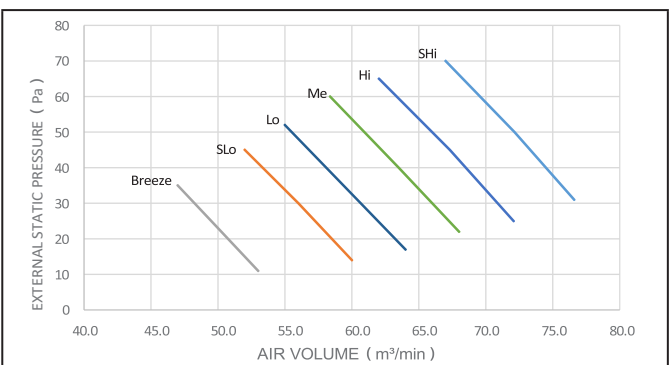


Celling ducted type


CHV-RS96SDHSP (100Pa)

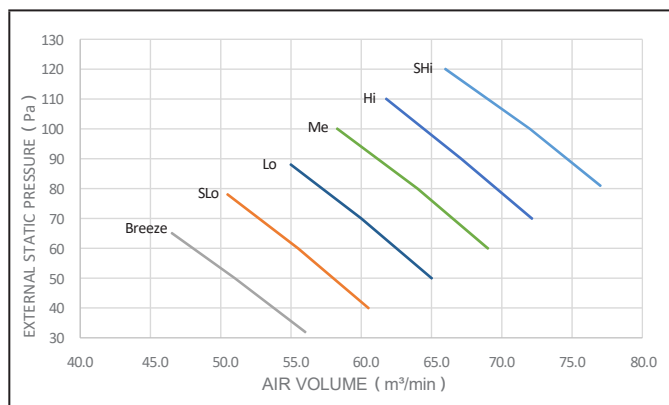


CHV-RS96SDHSP(150 Pa)

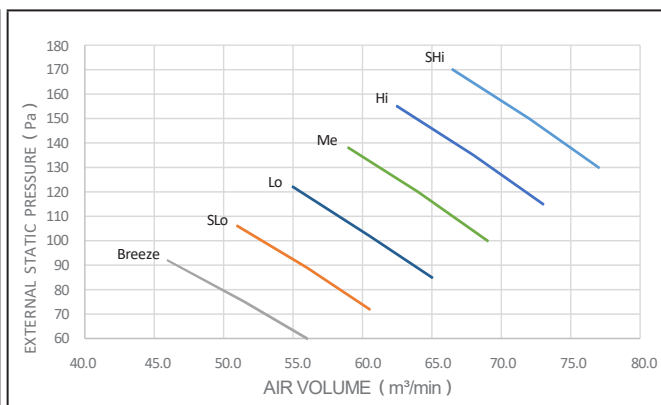

CHV-RS96SDHSP (200Pa)




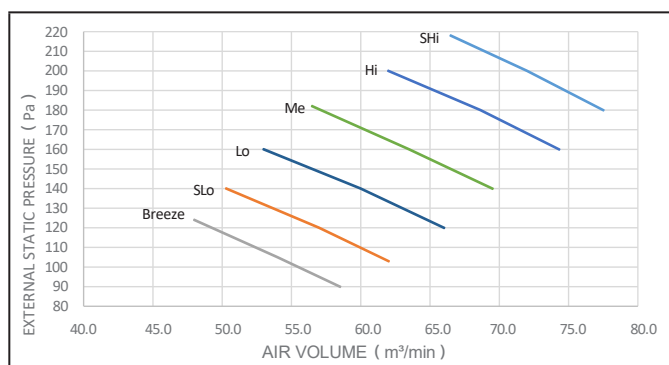


CHV-RS96SDHSP (250 Pa)

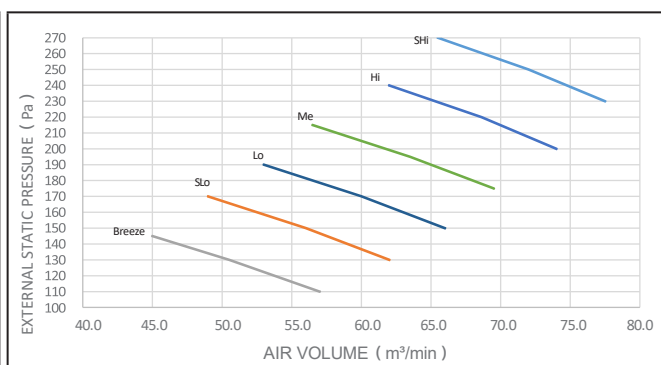


Sound Data

Ceiling Ducted Type

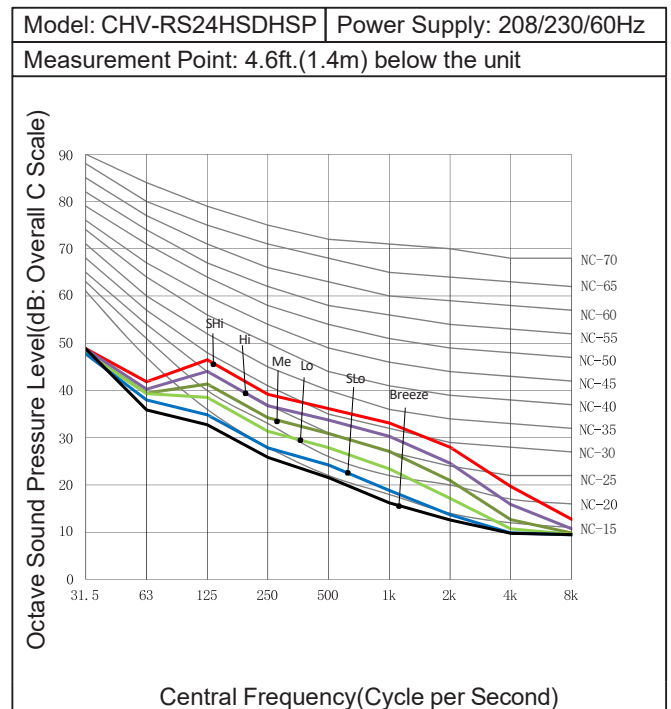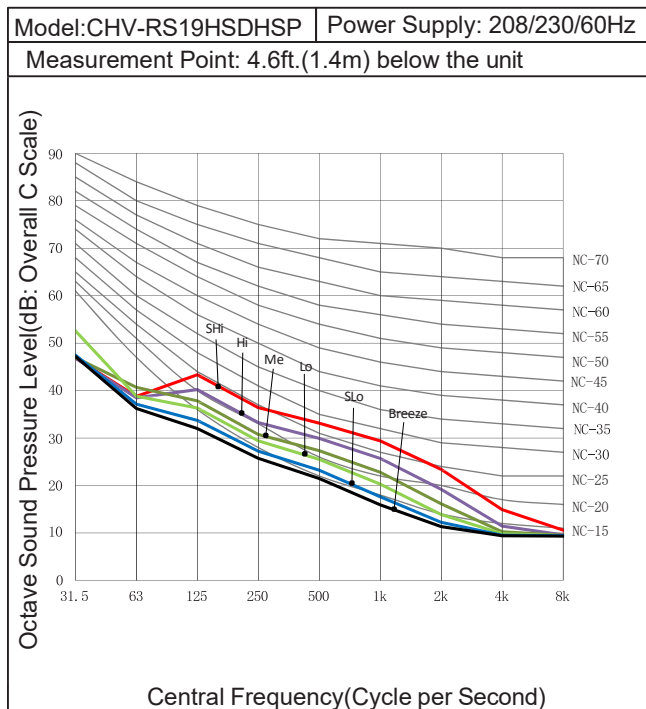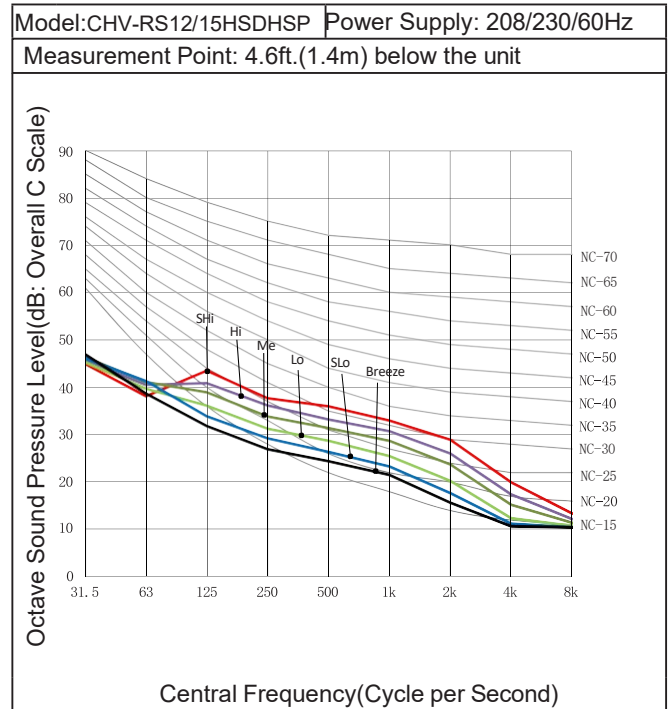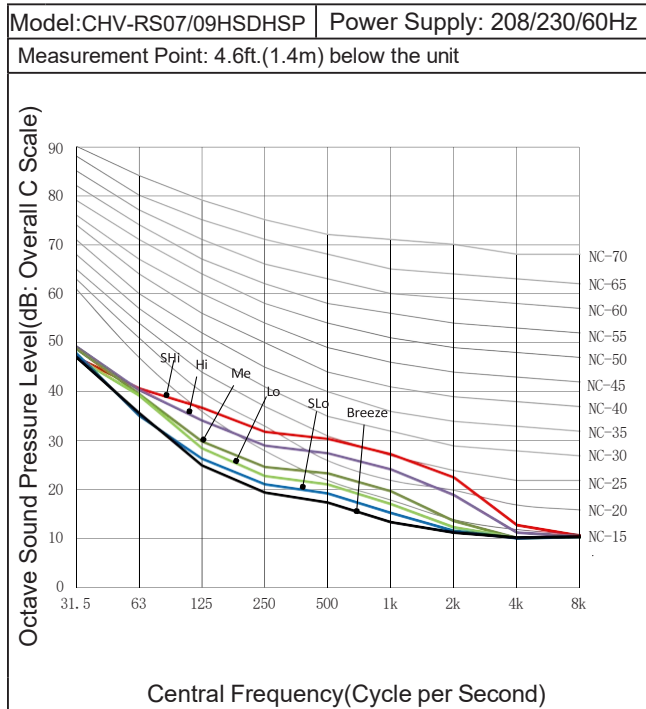


Celling ducted type


Model: CHV-RS30HSDHS Power Supply: 208/230/60Hz
Measurement Point: 4.6ft.(1.4m) below the unit

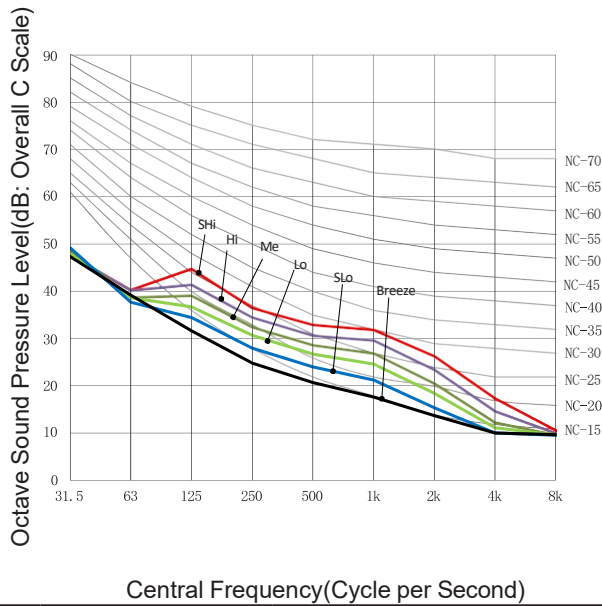


Model: CHV-RS38HSDHS Power Supply: 208/230/60Hz
Measurement Point: 4.6ft.(1.4m) below the unit

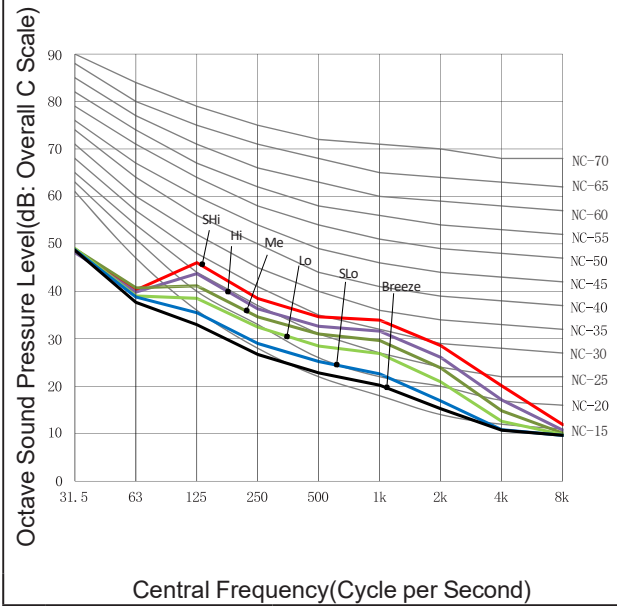

Model: CHV-RS48HSDHS Power Supply: 208/230/60Hz
Measurement Point: 4.6ft.(1.4m) below the unit

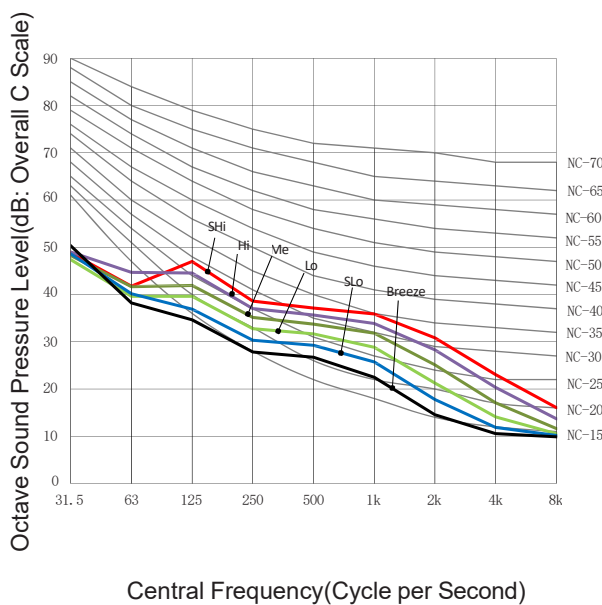


Model: CHV-RS54HSDHS Power Supply: 208/230/60Hz
Measurement Point: 4.6ft.(1.4m) below the unit

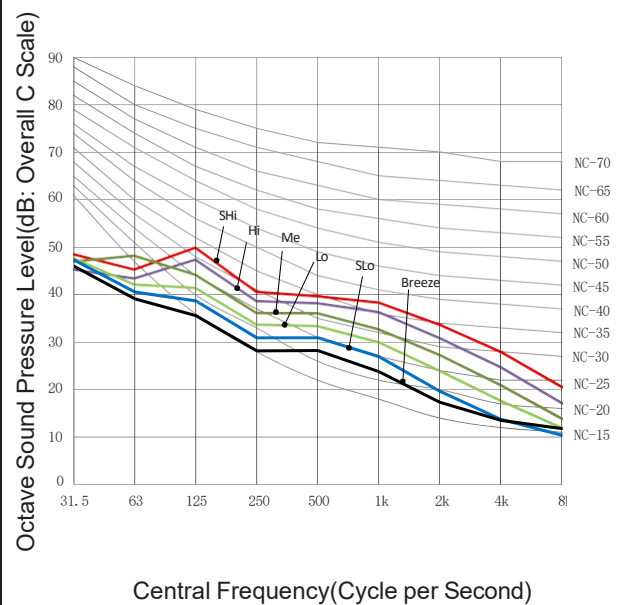


Model:CHV-RS76HSDHSPower Supply: 208~230V/60Hz

Measurement Point: 4.6ft.(1.4m) below the unit
External Static Pressure: 50 Pa

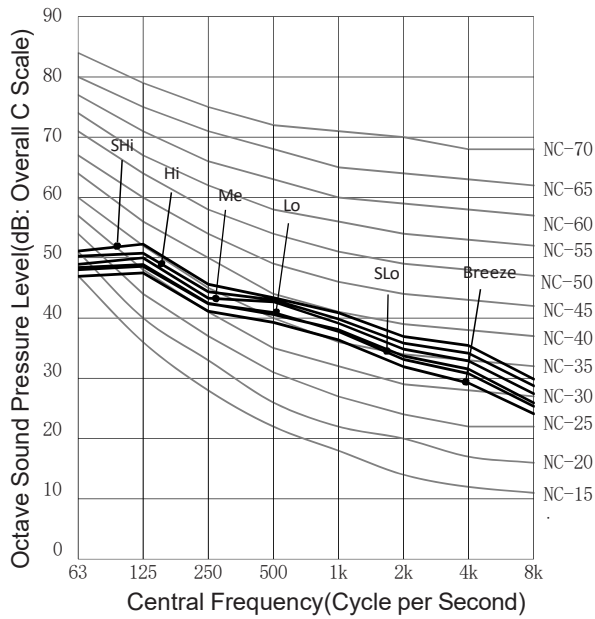


Model:CHV-RS76HSDHSPPower Supply: 208~230V/60Hz

Measurement Point: 4.6ft.(1.4m) below the unit
External Static Pressure: 100 Pa

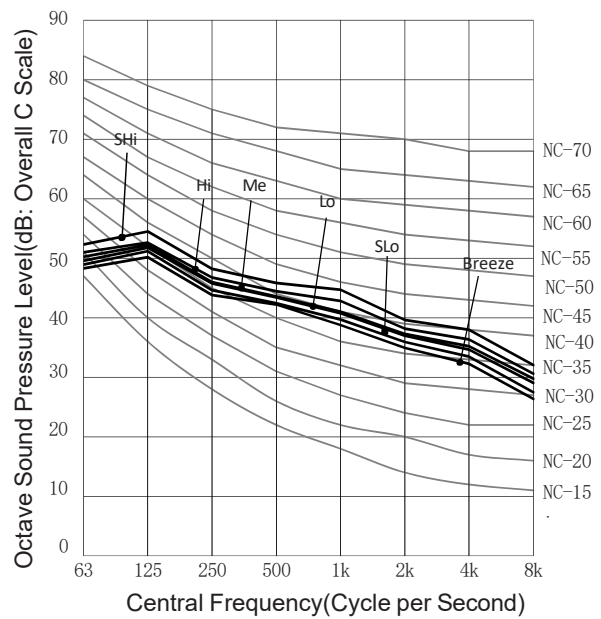


Model:CHV-RS76HSDHSPower Supply: 208~230V/60Hz

Measurement Point: 4.6ft.(1.4m) below the unit
External Static Pressure: 150 Pa

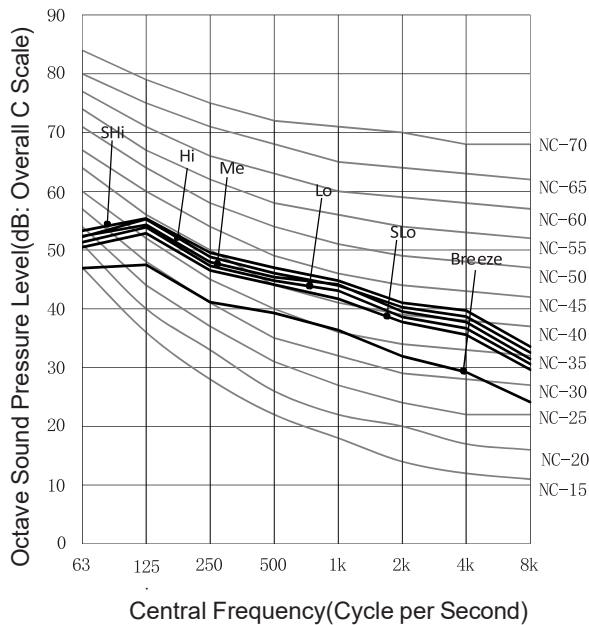

Model:CHV-RS76HSDHSPPower Supply: 208~230V/60Hz


Measurement Point: 4.6ft.(1.4m) below the unit
External Static Pressure: 200 Pa

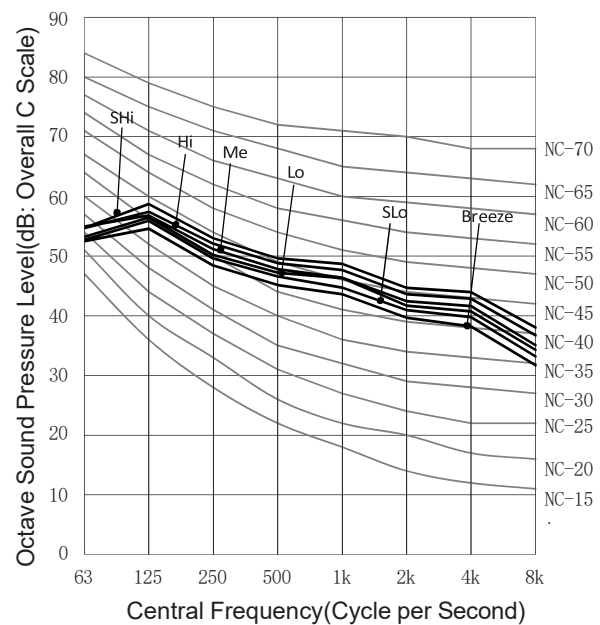

Celling ducted type


Model:CHV-RS76HSDH\$ Power Supply: 208~230V/60Hz

Measurement Point: 4.6ft.(1.4m) below the unit
External Static Pressure: 250 Pa

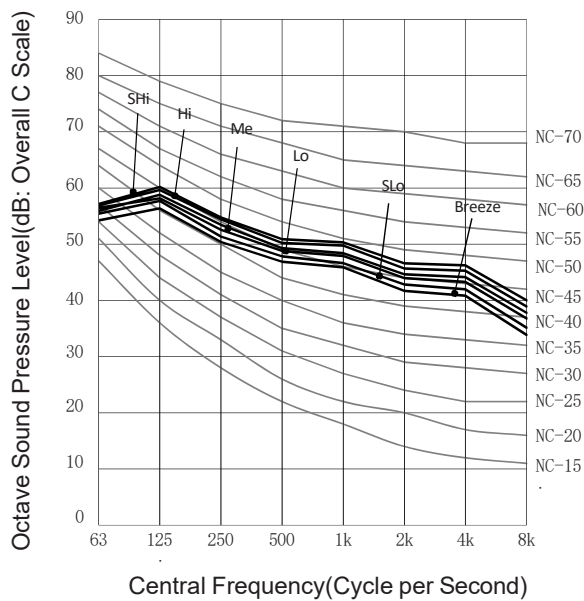


Model:CHV-RS96HSDH\$ Power Supply: 208~230V/60Hz

Measurement Point: 4.6ft.(1.4m) below the unit
External Static Pressure: 50 Pa

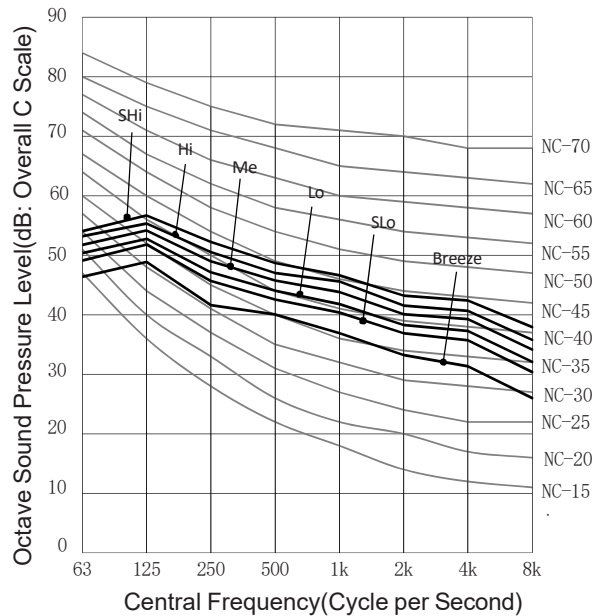

Model:CHV-RS96HSDH\$ Power Supply: 208~230V/60Hz

Measurement Point: 4.6ft.(1.4m) below the unit
External Static Pressure: 100 Pa

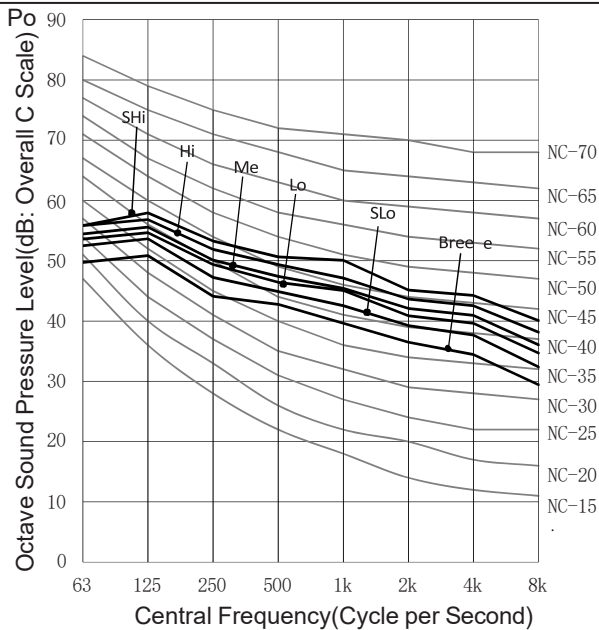

Model:CHV-RS96HSDH\$ Power Supply: 208~230V/60Hz

Measurement Point: 4.6ft.(1.4m) below the unit
External Static Pressure: 150 Pa

